



iForks 2500

31.08.2017


SPARE PARTS LIST



No.	Description		No.
2	SA-BA-IFORK-RC-N2	Battery module with rechargeable 1.2 V D-cells	2
8	SAP-BAP-HOLDER-WF-N2	Holder battery pack (incl. 3x bolt)	2
8a	CHP-LOCK-HOLDER-WF	Lock battery holder WF	2
9	WF-2A-100-45-608-N WF-2B-100-45-608-N	Weighing fork	2
10	LC-2000-M-350 LC-2000 LC-2000-M	Load cell 2000kg No longer available. Replaced by LC-2000-M-350 Load cell 2000kg	4
11	MP-RING-LC-FIXATION	Loadcell fixation ring	4
12	FS-WF-25-1150-10-15-RAL7021	Fork shoe 1150mm, Grey RAL7021	2
13	SA-HO-J-RWV-BLT	Bluetooth transmitter box (F1 and F2)	1
8+13	SA-BAP-HOLDER-WF-BLT-N2	Holder battery pack with bluetooth transmitter box (F1 and F2)	2
13a	SS-LABEL-WF-SMALL	Labels for Bluetooth transmitterboxes (set with nr. 1 and 2)	1
14a	SAP-MP-CP-RF-LEFT-FEM2A SAP-MP-CP-RF-LEFT-FEM2B	Coverplate forks (left) (incl. 4x bolt)	1
14b	SAP-MP-CP-RF-RIGHT-FEM2A SAP-MP-CP-RF-RIGHT-FEM2B	Coverplate forks (right) (incl. 4x bolt)	1
16a	MP-BRACKET-RAM-BB	Mounting bracket indicator RAM BB	1
16b	SA-MP-SUP-RAM-CLAMP-BASE	Indicator mounting support	1
17	SA-IN-31-IFORK	Indicator (assembled)	1
18	SA-CH-WF-DUAL SA-CH-WF-DUAL-UK SA-CH-WF-DUAL-US	No longer available. Replaced by SA-CH-DUAL-N2 (pos. 34) No longer available. Replaced by SA-CH-DUAL-N2-UK (pos. 34) No longer available. Replaced by SA-CH-DUAL-N2-US (pos. 34)	1
18a	CHP-CH-WF	No longer available. Replaced by SA-CH-DUAL-N2 (pos. 34) No longer available. Replaced by SA-CH-DUAL-N2-UK (pos. 34) No longer available. Replaced by SA-CH-DUAL-N2-US (pos. 34)	2
18b	SA-CHP-CH-WF-7V-20V	No longer available. Replaced by SA-CH-DUAL-N2 (pos. 34) No longer available. Replaced by SA-CH-DUAL-N2-UK (pos. 34) No longer available. Replaced by SA-CH-DUAL-N2-US (pos. 34)	1
19	SAP-EP-LEVELSENSOR	Level correction sensor (option) (incl. 2x bolt + ring)	1
20	FR-31N-RAV-HO-RAV-SHIELDED	Touch panel (cannot be re-used)	1
22	SAP-HOP-RAV-RAL3000-UPPER	Top housing indicator (red) (incl. 2x bolt and rubber ring) Also needed: Touch panel: FR-31N-RAV-HO-RAV-SHIELDED (pos 20).	1
23	INP-31-DISPLAY	Display indicator 3100	1
24	IN-31-N2-NO-ADS	Indicator board	1
24a	BA-31-BUTTON-3V	Button battery, 3v	1
25	SA-EB-31-N-BLT-DUAL	Bluetooth receiver board	1
26	HOP-MC	Middle cover	1
27	HOP-BLO-ENC-LOW	Cellrubber block	2
28	BA-1,5-PENN-AA-R6	AA battery 1.5V	4
29	BAP-SNAP-SINGLE	Contact snap single	2
30	BAP-SNAP-DUAL	Contact snap dual	1
31	HOP-RAV-STRAINRELIEF	Strain relief ECO	2
32	HOP-RAV-RAL9011-LOWER	Bottom housing indicator (black) (for 12v systems)	1
32a	HOP-RAV-RAL9011-LOWER-EXCH-N2 Pos. 32 no longer available for 6v systems. Pos. 32a + 32c replaces	Bottom housing indicator (black) (for 6v systems) pos 26 - 32 for 6v systems.	
32b	HOP-KIT-RAV-LOWER-BAT-EXCH-N2	Parts set lid + screw for N2 housing	1
32c	SA-HOP-BAT-HOLDER-4XAA	Subassembly, battery holder 4xAA incl. pad printing	1
34	SA-CH-DUAL-N2 SA-CH-DUAL-N2-UK SA-CH-DUAL-N2-US	Subassembly, charger iFork, N2 version Subassembly, charger iFork, UK plug, N2 Subassembly, charger iFork, USA plug, N2	1
36	MP-BOLT-M12-1,5-35-CYL	Bolt M12 x 1,5 x 35 socket head	8
37	MP-BOLT-M12-55-CS	Bolt M12 x 55 countersunk	4
38	MP-NUT-M12-LOCKNUT	Nut M12 lock nut	4

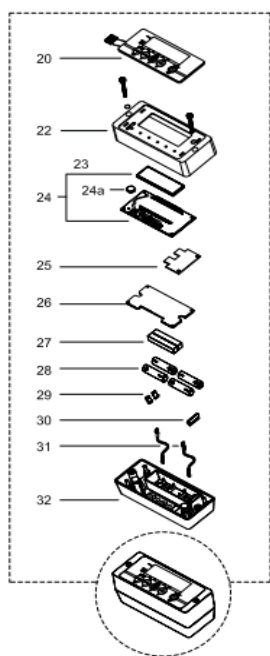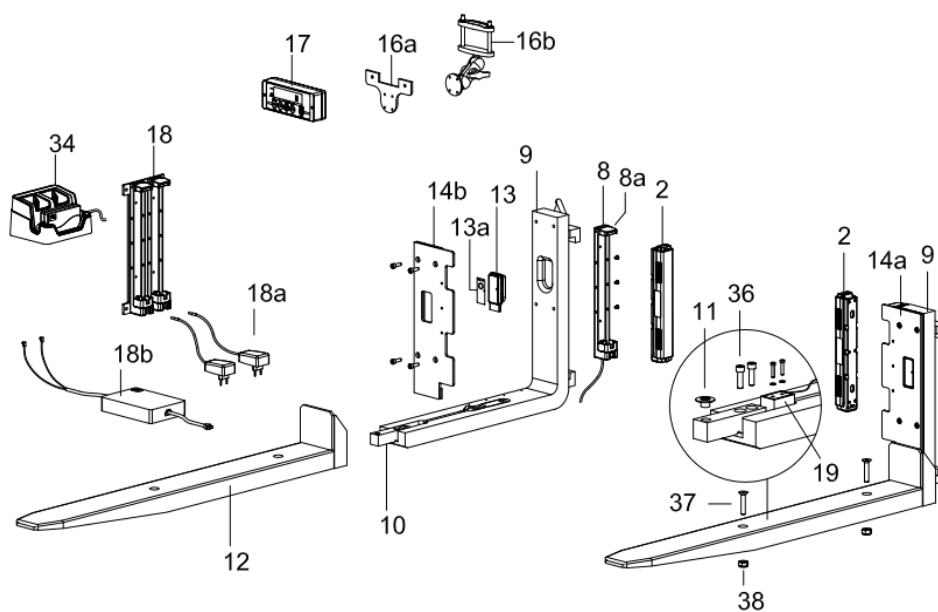

Indicator before 2013

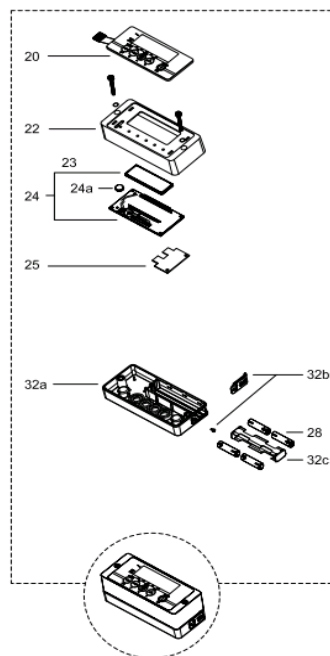

Indicator 2013

△ serial number of system to be mentioned when ordering